


## Quick guide — — Remote Touch



No.	Name	Function	Page
1	<b>“MENU” button</b>	Push this button to display the “Start” (menu) screen.	17
2	<b>“^·v” button</b>	Push this button to change the scale of the map and to scroll the list screen.	31, 35, 47
3	<b>“MAP/VOICE” button</b>	Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position.	38
4	<b>Remote Touch knob</b>	Move this knob in the desired direction to select a function, letter and map screen button.	31
5	<b>“ENTER” button</b>	Push this button to enter the selected function, letter or map screen button.	31
6	<b>“DISP” button</b>	Push this button to display the “Display” (quality control) screen.	36

## — Map screen

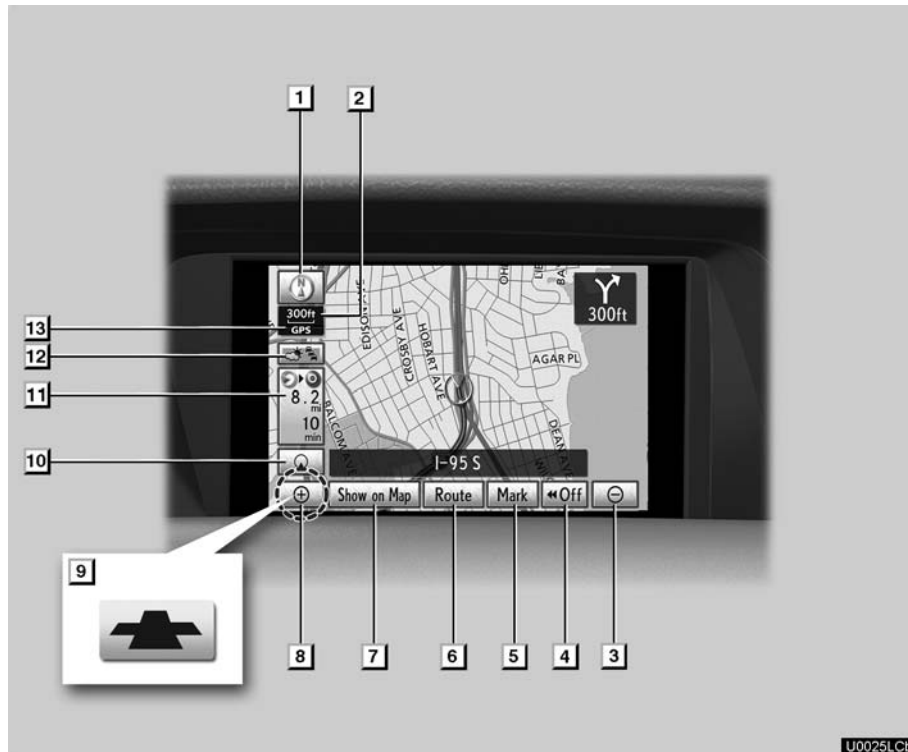


No.	Name	Function	Page
1	<b>North-up or heading-up symbol</b>	This symbol indicates a map view with north-up or heading-up. Selecting this symbol changes the map orientation.	48
2	<b>Scale indicator</b>	This figure indicates the map scale.	47
3	<b>Zoom out button</b>	Select this button to reduce the map scale.	47
4	<b>“◀◀Off”</b>	Select this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by selecting <b>“On▶▶”</b> .	354
5	<b>“Mark”</b>	Select this button to register the current position or the cursor position as an address book entry.	40
6	<b>“Route”</b>	Select this button to change the route.	98, 100

No.	Name	Function	Page
<b>7</b>	<b>“Show on Map”</b>	Select this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	106, 174
<b>8</b>	<b>Zoom in button</b>	Select this button to magnify the map scale.	47
<b>9</b>	<b>Foot print map button</b>	Select this button to display the foot print map and the building information.	47
<b>10</b>	<b>Screen configuration button</b>	Select this button to change the screen mode.	44
<b>11</b>	<b>Distance and time to destination</b>	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	97
<b>12</b>	<b>XM® indicator</b>	This mark is displayed when XM® information is received.	174
<b>13</b>	<b>“GPS” mark (Global Positioning System)</b>	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	415

## — Registering home



**1** Push the “MENU” button.

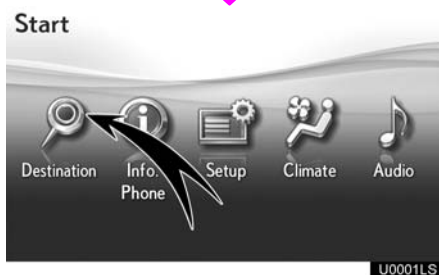

**2** Select “Destination” and push the “ENTER” button.



**3** Select “Go Home” and push the “ENTER” button.

If home has not been registered, you can register it by selecting “Go Home”.




**4** Select “Yes” and push the “ENTER” button.



U0004LC



U0005LC

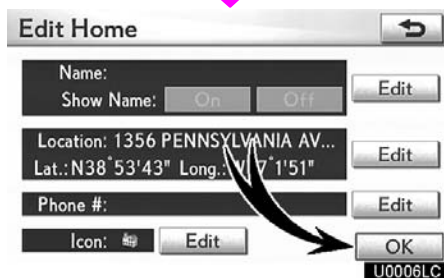

U0006LC

**5 There are 4 different methods to search your home.**

See "Destination search" on page 66.

**6 Select "Enter" and push the "ENTER" button.**

The "Edit Home" screen is displayed.

**7 Select "OK" and push the "ENTER" button.**

Registration of home is complete.


You can also register home by selecting "Setup". (See " (a) Registering home" on page 115.)

You can change the name, location, phone number and icon. (See " (b) Editing home" on page 116.)

## — Registering preset destinations



**1** Push the “MENU” button.

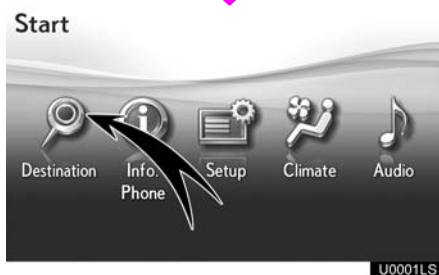

**2** Select “Destination” and push the “ENTER” button.



**3** Select one of the preset destination buttons and push the “ENTER” button.

You can set a preset destination to any preset destination button that has not yet been set.



**4** Select “Yes” and push the “ENTER” button.



U0009LC



U0010LC



U0011LC

**5 There are 4 different methods to search preset destinations.**

See "Destination search" on page 66.

**6 Select "Enter" and push the "ENTER" button.**

The "Edit Preset Destination" screen is displayed.

**7 Select "OK" and push the "ENTER" button.**

Registration of preset destinations is complete.

You can also register preset destinations by selecting **Setup**. (See " (a) Registering preset destinations" on page 118.)

You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 119.)


The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 68.)



## — Operation flow: guiding the route



**1** Push the “MENU” button.

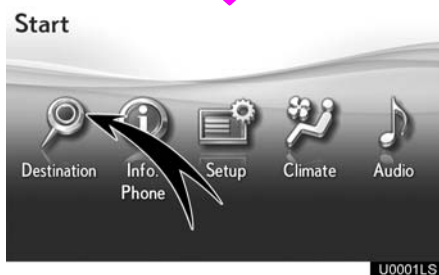


**2** Select “Destination” and push the “ENTER” button.



**3** There are 11 different methods to search destinations.

See “Destination search” on page 66.

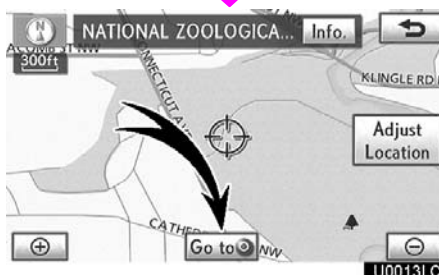

**4** Select “Go to” and push the “ENTER” button.

The navigation system performs a search for the route.



- 5 Select “OK” and push the “ENTER” button, and start driving.


Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 87.)

- 6 Guidance to the destination is given via voice and on the guidance screen.

## — Setting home as the destination



**1 Push the “MENU” button.**

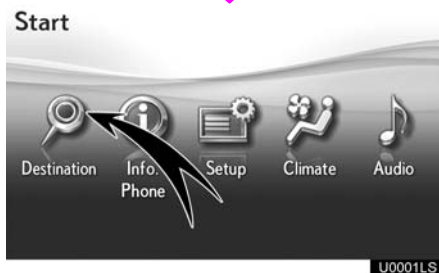

**2 Select “Destination” and push the “ENTER” button.**



**3 Select “Go Home” and push the “ENTER” button.**

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 115.)



**4 Select “Go to” and push the “ENTER” button.**

The navigation system performs a search for the route.



- 5 Select “OK” and push the “ENTER” button, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 87.)

- 6 Guidance to the destination is given via voice and on the guidance screen.